

WARRANTY:

7 Year Limited Warranty - U.S.A. and Canada Only


Effective December 1, 2005 Bostitch® L.P. warrants to the original retail purchaser that the product purchased is free from defects in material and workmanship, and agrees to repair or replace, at Bostitch's option, any defective Stanley Bostitch® branded office product (7) years from date of purchase. Warranty is not transferable. Proof of purchase date required. This warranty covers only damage resulting from defects in material or workmanship; it does not cover conditions or malfunctions resulting from normal wear, neglect, abuse, accident or repairs attempted or made by other than our national repair center or authorized warranty service centers. Driver blades, sharpener cutters, punch heads, and cutting discs are considered normally wearing parts. You are responsible for the costs of shipping the defective product to Stanley Bostitch® or its designated repair center. For optimal performance of your Stanley Bostitch® products, always use genuine Stanley Bostitch® staples and replacement parts.

THIS WARRANTY IS THE EXCLUSIVE WARRANTY OF BOSTITCH® L.P., AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BOSTITCH® L.P. SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

For information on our warranty claim procedure please visit us at www.BostitchOffice.com or contact us at 1-800-343-9329.

In Canada, please contact us at 1-800-567-7705.

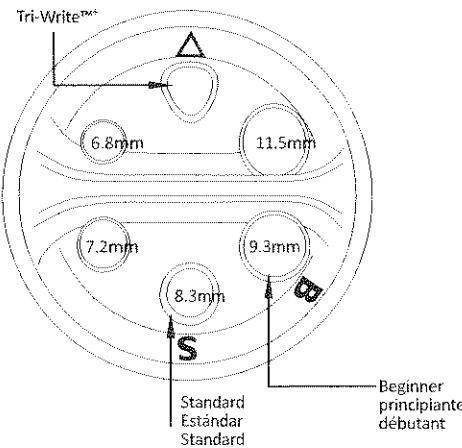

USA:
Manufactured under license by:
Amax Incorporated
East Greenwich, RI 02818
800.343.9329
Canada: The Stanley Works
1170 Invicta Drive Oakville, Ontario L6H 6G1
800.567.7705

Mexico:
En Mexico Importado por: Stanley Bostitch
S.A. de C.V., Av. de los Angeles No. 303, Local 1-C
Col. San Martin Xochimilco,
Delegacion Azcapotzalco, Mexico
D.F. CP 02120, R.F.C. SBO-861201-725
Contenido 1 pieza
55.8563.8530

Stanley® is a registered trademark of The Stanley Works or its affiliates and used under license.
Bostitch® is a registered trademark of The Stanley Works or its affiliates and used under license.
A00040

GARANTÍA:

Garantía limitada de 7 años: únicamente EE. UU. y Canadá

Con vigor a partir del 1 de diciembre de 2005, Bostitch® L.P. le garantiza al comprador minorista original que el producto comprado no tiene defectos de materiales ni mano de obra y acepta reparar o reemplazar, a criterio de Bostitch, cualquier producto de oficina de marca Stanley Bostitch® durante un plazo de siete (7) años a partir de la fecha de compra. La garantía no es transferible. Se requiere fecha de prueba de compra. Esta garantía cubre únicamente daños derivados de defectos en el material o mano de obra; no cubre condiciones o averías resultantes de desgaste normal, negligencia, abuso, accidente o reparaciones que se hayan intentado o realizado a través de otro servicio que no sea el centro de reparación nacional o un centro de servicio de garantía autorizado. Las hojas cortantes, las cuchillas del sacapuntas, los cabezales de perforación y los discos cortantes se consideran como piezas normalmente desgastables. Usted es responsable de los costos de envío del producto defectuoso a Stanley Bostitch® o a su centro de reparación designado. Para lograr un rendimiento óptimo de sus productos Stanley Bostitch®, utilice siempre grapas y repuestos genuinos de Stanley Bostitch®.

ESTA GARANTÍA ES LA GARANTÍA EXCLUSIVA DE BOSTITCH® L.P. Y REEMPLAZA A CUALQUIER OTRA GARANTÍA EXPLÍCITA, INCLUIDAS PERO SIN LIMITARSE A GARANTÍAS IMPLÍCITAS DE COMERCIALIZACIÓN O IDONEIDAD PARA UN PROPÓSITO EN PARTICULAR. BOSTITCH® L.P. NO SERÁ RESPONSABLE POR CUALQUIER DAÑO INDIRECTO, INCIDENTAL O CONSIGUIENTE.

Algunos estados o países no permiten la exclusión o la limitación de daños incidentales o consiguientes por lo que es posible que las limitaciones o exclusiones anteriores no se apliquen en su caso. Esta garantía le otorga derechos legales específicos y también es posible que cuente con otros derechos que variarán según el estado y/o el país.

Si necesita información acerca de nuestro procedimiento para reclamos de garantía, visítenos en www.BostitchOffice.com o comuníquese con nosotros llamando al 1-800-343-9329.

Si vive Canadá, llámenos al 1-800-567-7705.

Product Features: / Características del producto: / Caractéristiques du produit:

XHC™ cutter technology for 75% faster sharpening** and 12x longer life*

La tecnología de cortado XHC™ afila lápices 75% más rápido**, logrando que sus lápices duren 12 veces más.*
Technologie de coup XHC™ offrant un aiguisage 75% plus rapide** et une durée de vie 12 fois plus longue*

SharpGlow™ illumination provides visual indicator when sharpening is complete

La iluminación SharpGlow™ indica la finalización del afilado
Éclairage SharpGlowMC offrant un indice visuel indiquant la fin de l'affûtage

One-hand easy turn 6-size selector dial, with Tri-Write™ compatibility

Selector de tamaño de 6 posiciones y fácil manejo, con compatibilidad Tri-Write™

Cadrat de réglage pour 6 dimensions manœuvrable à l'aide d'une seule main et compatible avec Tri-WriteMC™

High capacity easy clean shavings tray


Contenedor de alta capacidad para virutas, fácil de limpiar
Dévidoir à grande capacité facile à nettoyer

Tool-free removable cutter cartridge for fast and easy cleaning or replacement with a solid die cast metal housing for optimum durability

Cartucho de hoja removible para una limpieza y cambios fáciles y rápidos con una carcasa sólida de metal fundido a presión para una durabilidad óptima

Cartouche de lame amovible sans outil pour nettoyer et changer plus rapidement la lame avec un logement en métal coulé sous pression pour une durabilité optimale

Antimicrobial protected
Protegido antimicrobico
Protection antimicrobienne

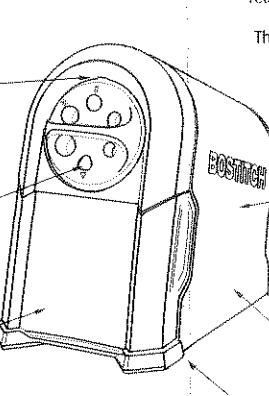

Oversized base with suction cup feet for added stability

Base extra grande con patas con ventosas para una mayor estabilidad
Base surdimensionnée avec pied à aspiration pour plus de stabilité

GARANTIE:

Garantie limitée de 7 ans - É.U. et Canada seulement

En vigueur depuis le 1er décembre 2005, BostitchMD SCS, garantit au premier acheteur que le produit acheté est exempt de défaut de matériau et de main-d'œuvre, et accepte de réparer ou de remplacer, au choix de Bostitch, tout produit defectueux de la marque Stanley BostitchMD pendant (7) ans à compter de la date d'achat. Cette garantie n'est pas transférable. La date de preuve d'achat est requise. La présente garantie couvre uniquement les dommages résultant de défauts de matériau ou de main-d'œuvre; ne couvre pas les conditions ou les mauvais fonctionnements découlant de l'usure normale, la négligence, l'abus, les accidents ou les tentatives de réparation effectuées par quelqu'un d'autre que notre centre de réparation national ou les centres de service de garantie autorisés. Le mécanisme de lames, les couteaux de taillage, les têtes de poinçon et les lames rotatives sont considérés comme des pièces à usure normale. L'acheteur est responsable des frais d'expédition du produit défectueux à Stanley BostitchMD ou à son centre de réparation autorisé. Utilisez toujours des agrafes et des pièces de recharge de marque Stanley BostitchMD pour obtenir des résultats optimaux.

CETTE GARANTIE EST LA GARANTIE EXCLUSIVE DE BOSTITCHMD SCS ET REMPLACE TOUTES AUTRES GARANTIES EXPRESSES INCLUANT, SANS Y ÊTRE LIMITÉ, LES GARANTIES TACITES DE QUALITÉ MARCHANDE OU D'UTILISATION À UN USAGE PARTICULIER. BOSTITCHMD SCS NE PEUT ÊTRE TENUE RESPONSABLE DES DOMMAGES DIRECTS, INDIRECTS, ACCESSOIRES OU IMMATERIELS.

Certains États, pays ou certaines provinces ne permettent pas de limitation de la durée d'une garantie tacite ni l'exclusion de dommages accessoires ou indirects, de sorte que la limitation ou l'exclusion pourrait ne pas s'appliquer à vous. Cette garantie vous donne des droits légaux spécifiques, et vous pouvez également avoir d'autres droits qui varient d'un état à un autre ou d'un pays à un autre.

Pour obtenir les informations au sujet de la procédure de réclamation au titre de la garantie, veuillez visiter le site internet à l'adresse www.BostitchOffice.com ou en nous appelant au numéro 1-800-343-9329.

Au Canada, veuillez nous appeler au numéro 1-800-567-7705.


STANLEY

BOSTITCH®

PROFESSIONAL

Instruction Manual

Manual de instrucciones
Manuel d'instructions

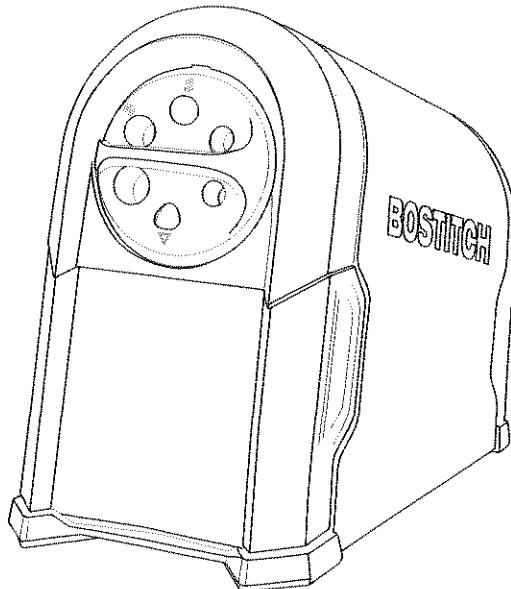

Super Pro™ GLOW™

Commercial Electric Pencil Sharpener
Sacapuntas Eléctrico Comercial
Taille-crayon Électrique De Type Commercial

EPS14HC

www.BostitchOffice.com

Featuring our innovative SharpGlow™ illumination, Sharpstop™ technology and our patent pending tool-free replaceable cutter cartridge, it delivers outstanding performance for high volume use. Precision engineered with the finest quality materials, this pencil sharpener is guaranteed to exceed your expectations. / Gracias por comprar el sacapuntas eléctrico comercial SuperPro™ Glow de Stanley Bostitch. Al incluir nuestro innovador sistema de iluminación SharpGlow™, la tecnología Sharpstop™ y nuestra cartucho de cuchillas que se pueden cambiar sin herramientas con trámite, brinda un rendimiento sobresaliente para gran volumen de uso. Como está diseñado con ingeniería de precisión y materiales de la más alta calidad, le garantizamos que este sacapuntas superará sus expectativas. / Merci d'avoir acheté le taille-crayon électrique lumineux SuperProMC de Stanley Bostitch. Doté de la technologie d'éclairage innovante SharpGlowAC et de notre cartouche de couteau remplacable sans recours à l'utilisation d'outil, dont le brevet est en instance, ce produit offre une performance exceptionnelle pour l'utilisation à volume élevé. Exécute avec précision sur plans d'ingénieurs avec les matériaux les plus sophistiqués, ce taille-crayon dépassera largement vos attentes!

Please visit www.BostitchOffice.com to register your product online. The added benefits of product registration include: Ingrésse en www.BostitchOffice.com para registrar su producto en línea. Entre los beneficios adicionales de registrar el producto se incluyen los siguientes: / Veuillez visiter le site Internet www.BostitchOffice.com pour enregistrer votre produit. Les avantages additionnels de l'enregistrement du produit comprennent :

- Your Safety – allows us to contact you with important product notifications. / Su seguridad: podremos informarle sobre importantes anuncios relacionados con el producto. / Votre sécurité : nous permet de vous communiquer les informations importantes au sujet du produit.
- Confirmation of Ownership – provides a record in case of product loss or theft. / Confirmación de su carácter de propietario del producto; sirve como registro en caso de pérdida o robo del producto. / Confirmation du droit de propriété : permet l'enregistrement du produit en cas de perte ou de vol.
- Improved Product Development – helps us continue to design product that meet your needs. / Desarrollo mejorado del producto: nos ayuda a seguir diseñando un producto que satisface sus necesidades. / Développement amélioré du produit : nous aide à concevoir un produit répondant à vos besoins.

DO NOT RETURN THIS PRODUCT TO THE ORIGINAL PLACE OF PURCHASE. FOR PRODUCT SUPPORT VISIT US AT www.BostitchOffice.com. NO DEVUELVA ESTE PRODUCTO AL NEGOCIO DONDE LO COMPRO. SI NECESITA SOPORTE TÉCNICO DEL PRODUCTO, VISÍTENOS EN www.BostitchOffice.com / NE PAS RETOURNER CE PRODUIT AU POINT DE VENTE D'ORIGINE. POUR OBTENIR DE L'AIDE AU SUJET DE VOTRE PRODUIT, VISITER LE SITE INTERNET AU www.BostitchOffice.com.

IMPORTANT: / IMPORTANTE: / IMPORTANT :

Please read these instructions completely and carefully before operating your new Stanley Bostitch product. Keep this Instruction Manual for future reference. / Lea cuidadosamente estas instrucciones por completo antes de utilizar su nuevo producto Stanley Bostitch. Consérve este Manual de instrucciones para consultarla en el futuro. / Veuillez lire attentivement toutes les instructions avant de commencer l'utilisation de votre nouveau produit Stanley Bostitch. Conservez ce manuel d'instructions pour consultation future.



WARNINGS: / ADVERTENCIAS: / AVERTISSEMENTS:

WARNING: ELECTRICAL SHOCK HAZARD: DO NOT OPEN MOTOR HOUSING. CONTACT CUSTOMER SERVICE FOR AUTHORIZED SERVICE CENTER FOR SERVICE OUTSIDE OF CUTTER CARTRIDGE REPLACEMENT. / ADVERTENCIA: RIESGO DE DESCARGA ELÉCTRICA. NO ABRA LA CARCASA DEL MOTOR. COMUNÍQUESE CON EL SERVICIO DE SOPORTE TÉCNICO AL CLIENTE PARA HABLAR CON UN CENTRO DE SERVICIO TÉCNICO AUTORIZADO EN CASO DE QUE NECESITE SERVICIO TÉCNICO PARA SOLUCIONAR PROBLEMAS QUE NO SEAN EL CAMBIO DEL CARTUCHO DE CUCHILLAS. / AVERTISSEMENT : RISQUE D'ÉLECTROCUTION. NE PAS DÉBUTER LE BOÎTIER DU MOTEUR. COMMUNIQUER AVEC LE SERVICE À LA CLIENTELLE POUR OBTENIR LE CENTRE DE SERVICE AUTORISÉ POUR LE REMPLACEMENT DE LA CARTOUCHE DU COUTEAU EXTERIEURE.

: WARNING: DO NOT ATTEMPT TO SERVICE OR REPAIR SHARPENER. / ADVERTENCIA: NO INTENTE REPARAR NI EFECTUAR TAREAS DE SERVICIO TÉCNICO SOBRE EL SACAPUNTAS. / AVERTISSEMENT: NE PAS TENTER DE FAIRE L'ENTRETIEN OU LA RÉPARATION DU TAILLE-CRAYON.

: WARNING: DO NOT CONNECT THIS PRODUCT TO AN ELECTRICAL SUPPLY OR ATTEMPT TO OPERATE THE PRODUCT UNTIL YOU AND ALL USERS HAVE COMPLETELY READ AND UNDERSTAND THIS INSTRUCTION MANUAL. KEEP THIS INSTRUCTION MANUAL IN A CONVENIENT LOCATION FOR FUTURE REFERENCE. / ADVERTENCIA: SOLO CONECTE ESTE PRODUCTO A UNA FUENTE DE ALIMENTACIÓN O INTENTE OPERARLO CUANDO TODOS LOS USUARIOS HAYAN LEÍDO Y COMPRENDIDO EL MANUALES DE INSTRUCCIONES. CONSERVE ESTE MANUAL DE INSTRUCCIONES EN UN LUGAR CONVENIENTE PARA CONSULTARLO EN EL FUTURO. / AVERTISSEMENT: NE PAS BRANCHER CE PRODUIT DANS UNE SOURCE D'ALIMENTATION ÉLECTRIQUE OUESSAYER DE FAIRE FONCTIONNER LE PRODUIT AVANT QUE TOUTES LES PERSONNES N'AIENT LUÉS ET COMPRIS LE MANUEL D'INSTRUCTIONS. GARDER CE MANUEL D'INSTRUCTIONS Á PORTÉE DE MAIN POUR CONSULTATION FUTURE.

CAUTION: / PRECAUCIÓN: / ATTENTION :

*** DO NOT insert soft materials such as chalk, crayons, wax pencils, and other non-wood pencils as they will clog the cutter and reduce performance. / NO introduzca materiales blandos como tiza, crayones, lápices de cera u otros lápices que no sean de madera ya que alatrinarán la cuchilla y reducirán el rendimiento del producto. / NE PAS insérer de matériaux mous comme de la craie, des crayons, des crayons de cire ou tout autre crayon qui ne sont pas en bois, car ils pourraient encrascer le couteau et diminuer son rendement.**

*** DO NOT insert hard materials such as pens, mechanical pencils, etc. as they will result in cutter damage. / NO introduzca materiales rígidos como lapiceras o lápices mecánicos, entre otros, ya que dañarán la cuchilla. / NE PAS insérer de matériaux durs comme des stylos, des portemines, etc., car ils endommageront le couteau.**


*** DO NOT touch exposed blades. In removable cutter cartridge. / NO toque las hojas cortantes expuestas del cartucho de la cuchilla removible. / NE PAS toucher les lames exposées dans la cartouche du couteau amovible.**

*** Only plug into a standard 120V AC outlet located near and easily accessible to the unit. / Encierre el dispositivo únicamente a un tomacorriente de 120 V CA estandar que se encuentre cerca y sea accesible a la unidad. / Brancher uniquement dans une prise murale classique de 120 V accessible située près de l'appareil.**

*** ALWAYS unplug power cord to disable power in the event of a malfunction or when servicing. / SIEMPRE desconecte el cable de alimentación para interrumpir el suministro eléctrico en caso de averías o cuando deba efectuar tareas de servicio técnico. / TOUJOURS débrancher le cordon d'alimentation afin de désactiver la mise en marche lors d'un éventuel défaut de fonctionnement ou pendant l'entretien.**

*** In the event the motor should overheat, the thermal overload protection will activate to protect the motor from damage. If the thermal overload protection activates, allow the sharpener to cool for 20-30 minutes. The thermal overload protection will then automatically reset and you can resume use. / En caso de que el motor se recaliente, se activará la protección contra sobrecarga térmica para proteger al motor. Si se activa la protección contra sobrecarga térmica, deje enfriar el sacapuntas durante 20 a 30 minutos. La protección contra sobrecarga térmica restablecerá la unidad y podrá volver a usarla normalmente. / En cas de surchauffe du moteur, la protection contre les surcharges thermiques s'active afin de prévenir les dommages au moteur. Si la protection contre les surcharges thermiques s'active, laissez refroidir le taille-crayon pendant 20 a 30 minutes. La protection contre les surcharges thermiques se réinitialisera automatiquement et le taille-crayon sera prêt pour l'utilisation.**

*** DO NOT submerge sharpener in water or use in a wet environment. / NO sumerja el sacapuntas en agua ni lo utilice en un ambiente húmedo. / NE PAS immerger le taille-crayon dans l'eau ou l'utiliser dans un environnement humide.**

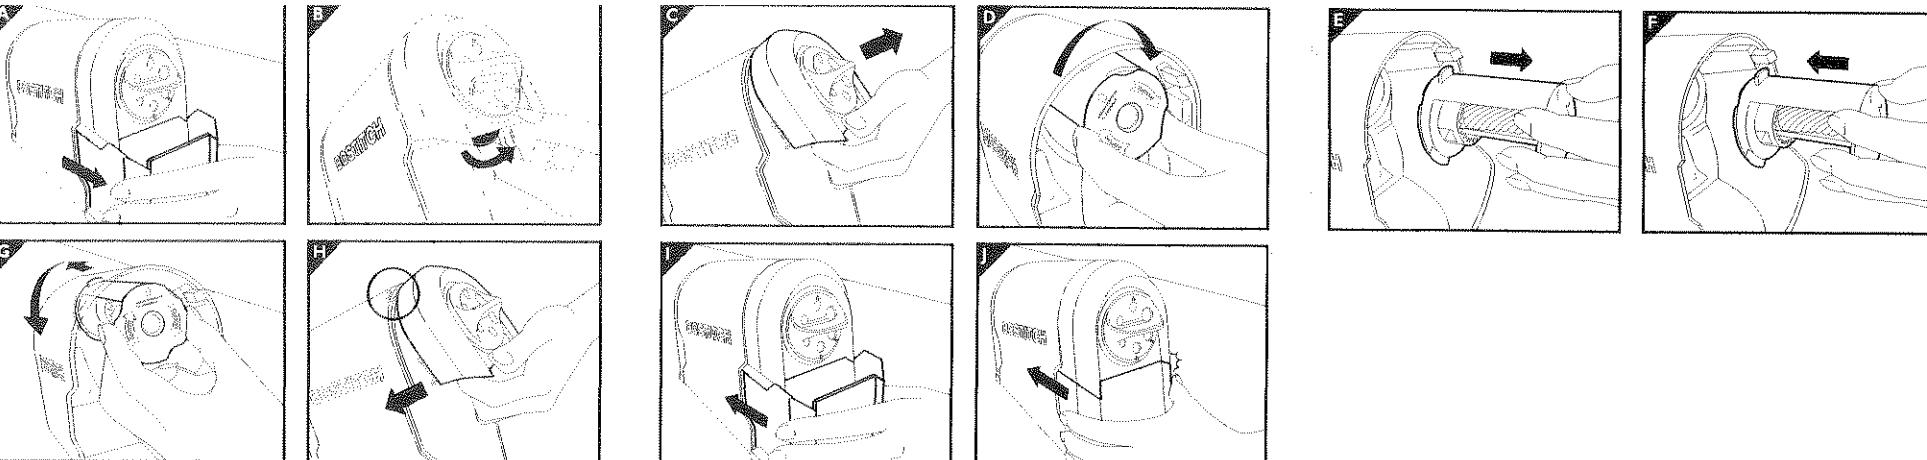

Operating Instructions:

1. Remove all packaging materials from product.
2. Insert the AC plug into any standard 120V AC outlet.
3. Rotate the pencil size selector dial to the correct pencil size.
4. Insert the pencil into the opening, applying light force to sharpen.
5. When unit shuts off and SharpGlow™ illuminates, sharpening is complete.
6. Remove pencil from sharpener.

Note: Pencils with un-centered lead will not sharpen evenly. Use only high quality wood case pencils for best performance.

Care and Maintenance:

1. SuperPro™ sharpeners are engineered to require minimal effort to operate. Excessive force can cause pencil sharpener to stall. If this occurs, simply reduce force until sharpener operates normally.
2. Emptying shavings tray
 - a) Remove the plug from the outlet.
 - b) Grasp sides of shavings tray and slide it out. (See illustration A)
 - c) Empty the shavings tray.
 - d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated. (See illustration I – J)
 - e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- a) Remove the plug from the outlet.
- b) Remove the pencil size selector dial assembly.
- c) Remove the shavings tray.
- d) Replace the shavings tray by sliding back into the sharpener, making sure that the tray is fully seated.
- e) Plug sharpener back into 120V outlet.

Note: The sharpener features a patented tamper proof magnetic safety switch that prevents the sharpener from operating while the shavings tray is removed.

Cleaning/Replacing Cutter Cartridge/Removing Jammed Pencil Tip

Clean the cutter cartridge periodically, especially when sharpening colored pencils. The soft colored pencil lead can clog cutters, and broken lead can become lodged in the cutter.

- <ol style="list-style-type